BERNINA EMBROIDERY SOFTWARE 9

Design your dreams Create your ideas





REFERENCE MANUAL

BERNINA CrossStitch

Note

The screen illustrations in this publication are intended to be representations, not exact duplicates of the screen layouts generated by the software.

LIMITED WARRANTY

BERNINA International AG warrants for a period of 90 days, commencing from the date of delivery of the software to you, that the products are free from defects in materials and workmanship. Your exclusive remedy for breach of warranty is to return the products together with proof of purchase to BERNINA or its authorized dealers within the warranty period, and they will be replaced free of charge. You are responsible for the cost of shipping and insurance, and bear the risk of loss, damage and misplacement of 'the products'.

The purchaser relies on their own skill and judgment in selecting the software for their own use and assumes the entire risk as to the results and performance of the software. Subject to warranties and conditions imposed by law, BERNINA International AG expressly disclaims all other warranties and conditions, whether express or implied, including without limitation, warranties and conditions of merchantability, fitness for a particular purpose, title and non infringement. BERNINA International AG specifically does not warrant that the software will meet the purchaser's requirements or run without interruption or error, or appear precisely as described in the accompanying documentation.

LIMITATIONS OF LIABILITY

To the maximum extent permitted by applicable law, in no event will BERNINA International AG or its developers, officers, employees or affiliates be liable to you for any consequential, incidental, or indirect damages (including damages for loss of business profits, business interruption, loss of business information and the like), whether foreseeable, or unforeseeable, arising out of the use of or inability to use the software or accompanying components, and accompanying documentation, regardless of the basis of the claim and even if BERNINA or an authorized BERNINA representative has been advised of the possibility of such damages.

Some states or jurisdictions do not allow the exclusion of incidental, consequential or special damages, so the above limitation or exclusion may not apply to you.

COMMERCIAL USE OF EMBROIDERY DESIGNS

With the purchase of BERNINA® Embroidery Software, BERNINA International AG grants the user the commercial use of all included embroidery designs (i.e. for sales, advertising, etc.), provided that the embroidery design is embroidered on a fabric (or similar). This includes all integrated embroidery fonts, but excludes all TrueType fonts and trademarks in general, in particular those of BERNINA International AG.

The commercial use of embroidery designs from BERNINA® Embroidery Software as files in digital form (i.e. individual sale of included embroidery designs) is not permitted unless the design file as such has been significantly modified. Significant means an obvious modification compared to the original embroidery design.

For users using CorelDRAW[®], also refer to the End User License agreement found under 'About CorelDRAW SE'.

TERMINATION

Your License to use the BERNINA® Embroidery Software is effective as long as you comply with the terms and conditions of the License Agreement. This License will terminate automatically without notice from BERNINA International AG if you fail to comply with any of the terms of the License Agreement. You may terminate this License at any time by returning the BERNINA® Embroidery Software, all copies thereof as well as all accompanying documentation and components to BERNINA International AG. You will not be entitled to a refund of any kind.

CONTACT

If you have any questions, please contact your BERNINA distributor, or

BERNINA International AG CH-8266 Steckborn/Switzerland

Tel: (41) 52-762 11 11 Fax: (41) 52-762 16 11


CHAPTER 1

Introduction to BERNINA Cross Stitch

Cross stitching is a popular technique for filling large areas with low stitch counts. It can also be used for outlines and borders. It is suitable for homeware, tablecloths, children's clothes and folk designs. Cross stitch is sometimes combined with appliqué.

Unlike machine embroidery where designs are enhanced with different stitch types, angles, and effects, in cross stitch you can only add dimension to the design with shades of colors. For this reason, most cross stitch designs use many more colors than machine embroidery.

This section provides an overview of the various cross stitch types.

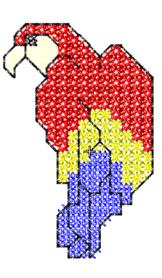

Types of cross stitch

Cross stitches are created on a matrix of squares or 'pixels'. Any part of the square can be stitched, from the edges to the diagonals. The full range of cross stitches is listed below.

Full cross	Upright cross	Three-quarter cross
Double cross	Half cross	Elongated vertical cross




Quarter cross	Elongated horizontal cross	Mini cross
Single line	French knot	

Cross stitch fills

When using cross stitch as a fill you can select from any of the cross stitch fill types.


Full cross stitch

Full cross stitches are made up of two equal-length stitches that cross at the center to form an X. The overall effect of the fill depends on which stitch in the X lies underneath or on top. You can also mix and match for special effects.

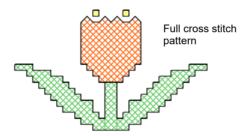

Three-quarter cross stitch


A three-quarter stitch is most often created by stitching a quarter stitch followed by a half stitch. A different effect is achieved by stitching the half stitch first and anchoring it with the quarter stitch.

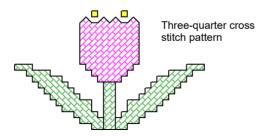



Note The long arm of the three-quarter stitch can go either / or \ directions.

Frequently a quarter stitch and a three-quarter stitch of different colors share a single square. Mix and match their positions to give different effects.

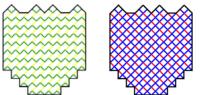




Mixtures of quarter and a three-quarter stitches

Half cross stitch


A half stitch is simply a diagonal stitch that looks like / or like \. Half stitches are usually used for shadows and background shading. The stitch can start from any corner. Sometimes two half stitches of different colors are used to make one full cross stitch.

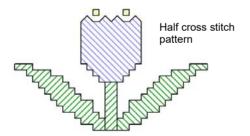

Half stitches can go in either direction depending on the effect you want to achieve. For example, half cross used to represent feathers would slant in the direction of the feathers themselves.


Quarter cross stitch

Quarter stitches are used to stitch more intricate patterns.

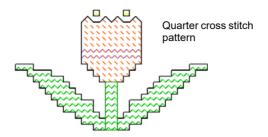

Mini cross stitch


Mini cross stitches are two equal-length stitches that cross at the center to form an X but they only fill quarter of the square. Use mini cross stitch for details such as eyes or for a denser look in parts of your design.

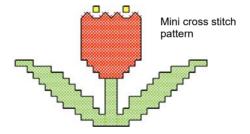

Upright cross stitch


Upright cross stitches are comprised of a vertical and horizontal stitch.

The stitches can be worked diagonally across the canvas, or in a horizontal or vertical line.

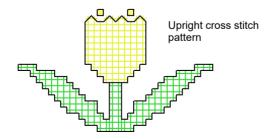

Double cross stitch

Double cross stitch is comprised of two full cross stitches stitched at 90° on top of each other. A double cross stitch resembles a star. It is generally used in a scattered fashion or worked into a row to form a decorative border.

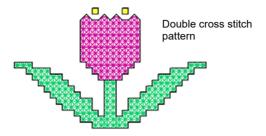


Typically the top thread of the bottom cross is the stitch which lies at 135° to the horizontal. The top thread of the overlapping cross is the horizontal stitch.

Elongated cross stitch

Elongated cross stitch consists of two equal-length stitches that cross to form an X. There are two types:

- elongated horizontal cross stitch
- elongated vertical cross stitch.


Elongated horizontal cross stitches are only half the height of normal cross stitch and elongated vertical cross stitches are only half the width of normal cross stitch.

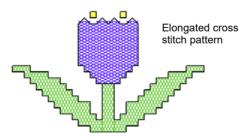



French knots

French knots were originally a hand-stitch used to create a raised look for embellishment. They were traditionally used in 'whitework' with very fine cotton and silk threads.

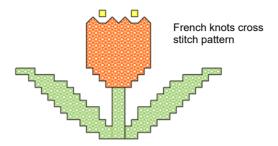

French knots can be used in combination with other cross-stitch types. Use them for eyes, door knobs, or dots for flower pistils. Or use them in place of the beads used in hand-work designs – e.g. ornaments on a Christmas tree or to dot the letter 'i'. Try them with colorful metallic or variegated threads. Use them as an outline border. Try them with colorful metallic or variegated threads. French knots are better sewn in larger grids.

Cross stitch borders

Cross stitch can be used as an embroidery outline or border. You can also combine cross stitching with other stitch types to achieve special effects.


You can make outlines with **Single Line** or **Full Cross** stitches or a combination of both for a denser border. A **Single Line** outline is treated by the software as a border while a **Full Cross** outline is treated as a fill. This is important if you need to delete a border because a single line can be deleted as a single object while a full cross stitch border cannot.

Single line border

Single line stitches are only used to create borders or add details. The single line can be placed on any side of the square. Click on the side you want to place the line. You can place a single line border on one side or all




four sides of the square. The single line border can be placed in a square which already has a cross stitch in it.

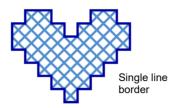

Full cross border

Full crosses can also be used as a decorative outline stitch. If you use full cross as a border it will be the same cross stitch type as selected in the fill stitch type list. You can change this by changing the fill stitch type.

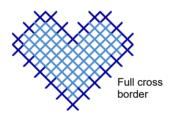

Cross stitch variations

The orientation of fractional cross stitches can be varied to create different patterning effects. You do this directly pixel-by-pixel, or by setting a fill stitch orientation. You can also combine fractional cross stitches in a variety of ways. See also Types of cross stitch.

Three-quarter cross stitches

Quarter and three-quarter cross stitches can be used to create rounded edges. See also Cross stitch fills.












Half cross stitches

Half cross stitches can be used to give objects an 'airy' look. You can also use half cross stitches to make a full cross stitch with two colors. See also Combination stitches.



Quarter cross stitches

Quarter and three-quarter cross stitch can be used to smooth rounded edges. You can also use quarter cross stitch to make a full cross stitch with up to four colors. See also Combination stitches.

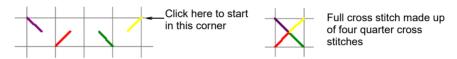


Mini cross stitches

Use mini cross stitch for details such as eyes or for a denser look in parts of your design.




Elongated cross stitches

Vertical and horizontal elongated cross stitches are made up of two equal-length stitches that cross to form an X. They fill either the left, right, top or bottom of the square.

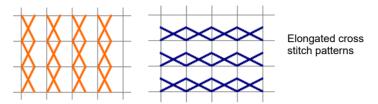

Combination stitches


Quarter, half and three-quarter cross stitches can be combined to make crosses comprised of multiple colors. You can also combine mini crosses, elongated vertical or horizontal crosses and outline stitches.

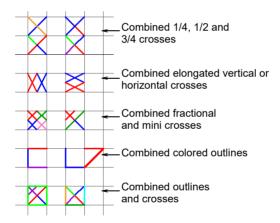

CHAPTER 2

CROSS STITCH ESSENTIALS

Cross stitch design involves a different digitizing technique to normal embroidery design. For this reason, BERNINA Cross Stitch is a separate application to the main BERNINA Embroidery Software application. It also has a different work environment with different settings for design size and density. Like the main application you will do most of your work with digitizing backdrops. Design viewing is also different to BERNINA Embroidery Software.

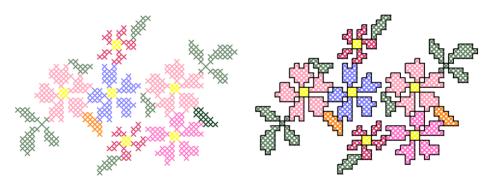

This section describes the use of the BERNINA Cross Stitch design window, as well as techniques for setting up your work environment and design size and density. It also covers working with backdrops and viewing cross stitch designs. It also discusses handling of cross stitch design files.

Launching BERNINA Cross Stitch

Cross stitch design involves a different digitizing technique to normal embroidery design. For this reason, BERNINA Cross Stitch has its own design window which you open from within BERNINA Embroidery Software.




To launch BERNINA Cross Stitch...

- ▶ Run BERNINA Embroidery Software.
- ▶ Go to the **Applications** toolbox and select **Cross Stitch**.



BERNINA Cross Stitch opens in its own design window.

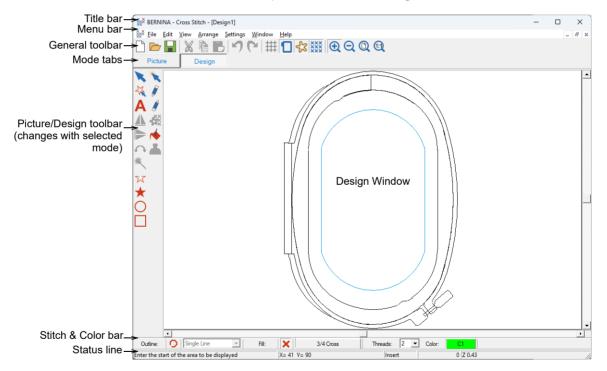




Setting design size & density

In BERNINA Cross Stitch, design size is determined by 'fabric count'. The more stitches per inch, for example, the smaller and more compact the design. In addition, you need to set up your design grid for easy visualization and cross stitch placement. You can also visualize your design within a target hoop. Similarly, you can select a background color or fabric for more realistic previews and presentations.

Set design size

You set cross stitch design size by adjusting the 'fabric count', generally defined as 'holes per inch'. This actually changes the scale of your finished design. The more stitches per inch, the smaller and more compact the resulting design.

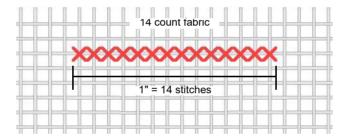

Cross stitch fabric used in handcraft is woven with the same number of threads in each direction to create evenly-sized squares. There are two



main types – aida and linen. Aida is the most popular. It is made from 100% cotton and comes in various fabric counts.



Different cross stitch fabrics with varying fabric counts

Known commercially as 'evenweave', these fabrics are suited to traditional cross stitch because they produce evenly-sized thread blocks in both directions. Stitches appear as squares or parts of squares. The higher the fabric count, the tighter the weave, and therefore the smaller the cross stitches produced. Fabric count in machine embroidery still determines design size – the more stitches per inch, the smaller and more compact the design. However, fabric count in the software does not necessarily correspond to fabric warp and weft when stitched on the machine.

To set the design size...

1 Select **Settings > Fabric Count**. The **Fabric Count** dialog opens.






2 Select a fabric count option, inches or millimeters:

Option	Purpose
Stitches per inch	The fewer stitches per inch, the bigger the resulting design.
Stitches per mm	Because a cross stitch is bigger than a millimeter, you can adjust the mm and stitch settings in relation to each other. The higher the mm value, or smaller the stitch value, the bigger the design.




Tip By clicking Update, you get an immediate conversion of any values you have entered. For example, change the stitches per inch value, click **Update**, and the corresponding stitches per mm value will be updated.

3 Click OK.

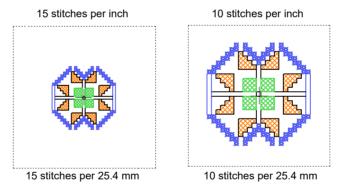

Set stitch density

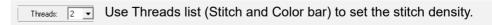

A common problem with cross stitch designs is that they 'pull', especially with smaller, closely packed stitches. Cross stitch designs tend to pull in a uniform way with gaps usually forming in straight lines. Sometimes holes appear giving the impression of missing stitches. To mitigate these problems, you can adjust cross stitch density by stitching once, twice or

three times. The number of 'crossovers' correspond to the values **2**, **4** and **6** in the **Threads** list. You can change these values at any time.




Tip If you create a design where every square has a stitch, remember to baste and stabilize the fabric.

To set the stitch density...

Select a value from the Threads list.

The value **2** corresponds to a single stitch, **4** is double, while **6** is triple. This is represented on screen by line thickness.

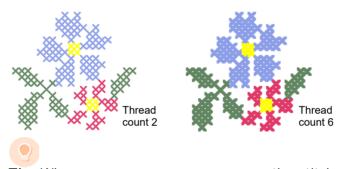


Tip When you move your mouse over the stitch, a tool tip will tell you the type and color of stitch used.

Setting up work environment


For cross stitch work, you need to set up your design grid for easy visualization and cross stitch placement. You can also visualize your design



within a target hoop. Similarly, you can select a background color or fabric for more realistic previews and presentations.

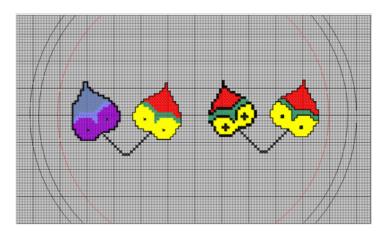

Picture & Design modes

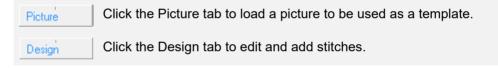


BERNINA Cross Stitch uses two window modes, **Picture** mode and **Design** mode. Use **Picture** mode to open or scan a picture to use as a template for stitching. Edit your picture in **Picture** mode, then select **Design** mode to edit your stitches or go directly to **Design** mode to add stitches without using a template. To see your design in **Artistic** mode, open it in BERNINA Embroidery Software.

Related topics

Use cross stitch files with BERNINA Embroidery Software

Change grid settings

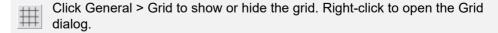




Use the **Options** > **Grid** dialog to change grid settings:

- ▶ Show or hide the grid
- ▶ Show major lines (when grid is on)
- Set the grid spacing
- ▶ Change the color of major and minor lines.


To change grid settings...

1 Right-click the **Grid** icon. The **Options > Grid** tab opens.

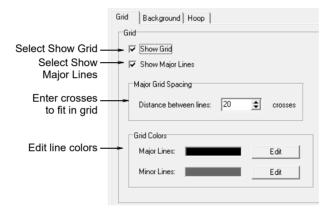

- 2 Select the Show Grid checkbox to show grid lines.
- 3 Select **Show Major Lines** to show major grid lines.
- **4** Enter the number of crosses to fit between the major grid lines.



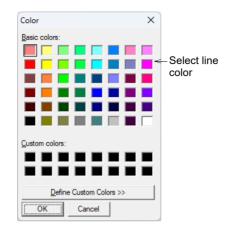

- **6** Select from the available colors or define your own. Click **Define Custom Colors** to mix your own colors from the color wheel.
- 7 Click OK.

Change hoop settings




Click General > Hoop to show or hide the hoop. Right-click to open the Hoop dialog.

You can show or hide the hoop, change the hoop size and center the design in the hoop.



To change hoop settings...

1 Right-click the **Hoop** icon. The **Options** > **Hoop** tab opens.

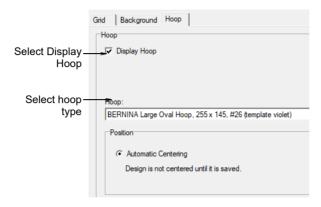

- 2 Select the **Display Hoop** checkbox.
- 3 Select a hoop type from the list.



Note Automatic Centering is always on. To make a group of stitches sit on one side of the design, digitize some temporary stitches on the other side.

4 Click OK.



Tip If you resize a design to fit inside the hoop, stitches may be stacked on top of each other and pull the fabric. You can avoid this problem by reducing the number of crossovers to single (2 threads) for both fills and outlines. You can also use a thinner weight thread. See also **Set stitch density**.

Change background colors & fabrics

In BERNINA Cross Stitch you can change the background color of the design window to match the color of your fabric. Or you can select a background fabric for more realistic previews and presentations.




To change the background color or fabric...


- 1 Select Settings > Options.
- 2 Select the Background tab.



- 3 Select the design window background type.
 - Color: uses the selected color.
 - Fabric: uses an image of a fabric.
- 4 Select a color or fabric to use.
 - ▶ To select a background color, click Edit. Select a color from the Color dialog and click OK.

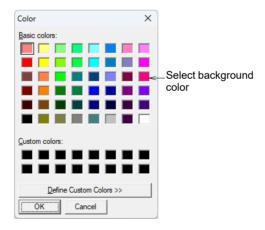

▶ To select a fabric, click Browse. Select a fabric type from the Open dialog and click OK.

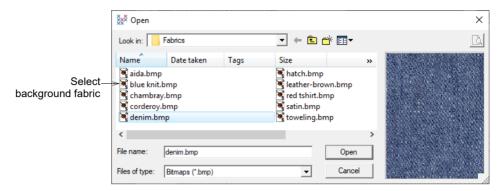

You can center or tile the fabric bitmap in the design window. If the bitmap is large enough to fill the entire window, select **Center**. Otherwise, select **Tile**.

5 Click OK.



Working with backdrops

Bitmap images can be inserted or scanned into BERNINA Cross Stitch for use as digitizing backdrops. You can digitize backdrop images automatically using **Auto Stitch**. Use solid color bitmaps to make suitable color blocks for cross stitches.



Tip If an image needs to be resized or rotated, it is best to do so during scanning. Scaling afterwards may distort the image.

Insert bitmap images



Use Picture > Load Picture to open a picture.




Use Picture > Scan Picture to scan your artwork.


You can insert bitmap images of various formats for use as digitizing backdrops.

To insert a bitmap image...

- 1 Click the **New** icon. A new file opens.
- 2 Click Picture mode to open a picture.
- 3 Click Load Picture. The Open dialog opens.

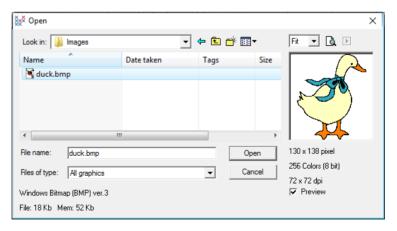

- 4 Select a folder from the **Look In** list.
- **5** Select a file type from the **Files of Type** list (e.g. BMP).
- **6** Select the file you want to insert.

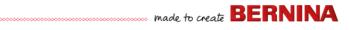



Tip Select the **Preview** checkbox to preview the selected file.

- 7 Click Open.
- 8 Move the picture so it fits inside the hoop or change the hoop size.



Note Areas outside the hoop will not be stitched.

Related topics

▶ Change hoop settings

View & hide bitmap images




Click General > Picture to show or hide the picture.


You can show or hide a bitmap backdrop temporarily while you digitize in **Design** mode.

To view or hide a bitmap image...

- ▶ Click the **Picture** icon to show the image.
- Click it again to hide the image.

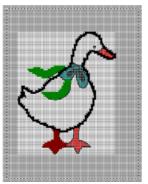

Show picture

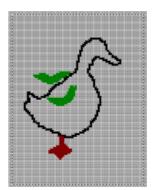

Hide picture


Scale & transform bitmap images

You can scale and reshape images once they are loaded into BERNINA Cross Stitch. However, if an image needs to be resized or rotated, it is best to do so during scanning. Scaling afterwards may distort the image.


To scale or transform a bitmap image...

- 1 Insert the image.
- 2 Click the Select icon.
- 3 Click the image.

Eight resize selection handles appear around the image. Click and drag these to scale the image as you would any other object.

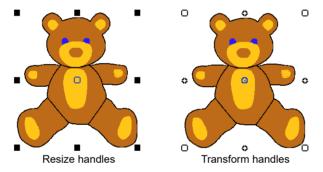

4 Click the image again. Eight transform selection handles appear around the image. Click and drag these to rotate or skew the image as you would any other object.

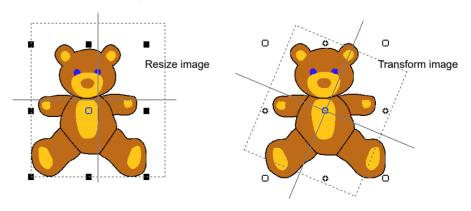


Related topics

▶ Insert bitmap images

Viewing cross stitch designs

While you are working in BERNINA Cross Stitch, you will toggle between different viewing modes to better visualize and understand your design. You will also routinely consult the **Status Bar** for important information about the design.

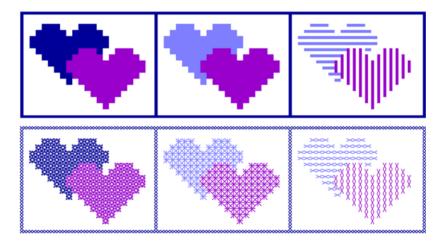

View crosses & colors

XXX

Click General > Crosses to show stitches as colored tiles or cross stitches.


There are two display modes for BERNINA Cross Stitch – crosses or colored tiles. When you change to tile mode, you see the same result as when you import a bitmap into the design window.

To view a design as crosses or tiles...

1 Select **Design** mode.




- **2** Click the **Crosses** icon. Any digitized areas are shown as crosses (or lines for line borders).
- **3** Click again to show stitches as colored squares.

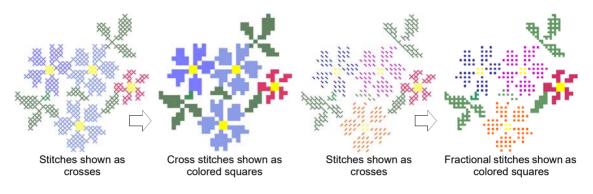


To view a design by color...

- 1 Select View > View by Color:
 - ▶ To select a range of colors, hold down **Shift** then select first and last.
 - ▶ To select multiple colors, hold down Ctrl and click.

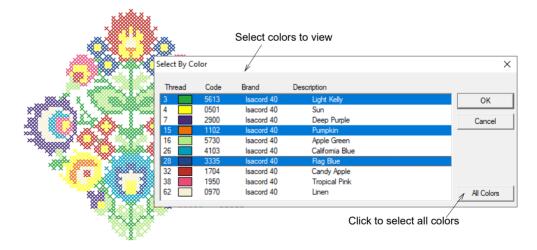




2 Click **OK** to view. To view all colors again, click the **All Colors** button in the dialog.

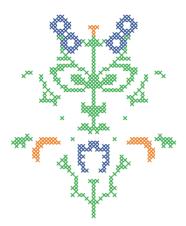

3 To view all colors again, click the All Colors button in the dialog.


Zoom tools

Zoom tools allow you to magnify your view of the design by zooming in on individual stitches or details. Zoom tools are available from the **View** menu and **General** toolbar. Experiment with the available options.

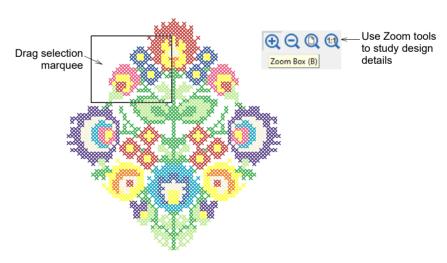



For instance, to zoom in on a section of design, select **Zoom Box** or press **B**, and drag a marquee around the zoom area. To display the whole design, select **Show 1:1** or press **1**.

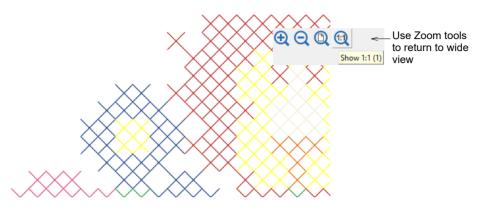

View design information

The **Status Bar** provides design information such as individual stitch information, approximate stitch count and thread usage as well as the zoom factor of the design.



Handling cross stitch design files

Cross stitch designs have their own ARX file format. This can be read by $\mathsf{BERNINA}^{\$}$ Embroidery Software. You can also combine ARX with designs in other formats.

Save cross stitch designs






Save your design early and often. Use the ARX extension for saving cross stitch files.

To save a cross stitch design...

- 1 Select File > Save. If this is the first time you have saved the design, the Save As dialog opens.
- 2 Select the cross stitch file type from the **Files of Types** list. You can only save in ARX format.

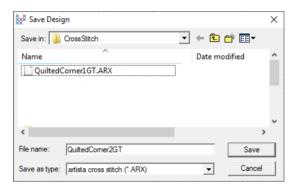

3 Type a new name for the design and click **Save**.

Use cross stitch files with BERNINA Embroidery Software


Cross stitch designs are saved as ARX files. These can be opened directly into BERNINA Embroidery Software and combined with other embroidery.

To use a cross stitch file with BERNINA Embroidery Software...


1 Start BERNINA® Embroidery Software.





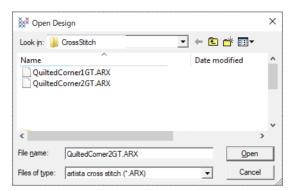


- 3 Select ARX files from the Files of Type list.
- 4 Select your file.
- **5** Click **Open**. The cross stitches display as they will be stitched.

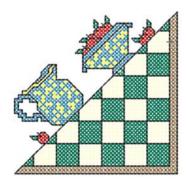

CHAPTER 3

CROSS STITCH DIGITIZING

In BERNINA Cross Stitch you can add cross stitches either to an entire design or selected areas. Or you can place them individually. There are two stitch types, **outline** and **fill**. An outline stitch can be a single run, or a line of cross stitches. A fill can be any of the cross stitch types. You can preset stitch type, length and the number of times each stitch is sewn.

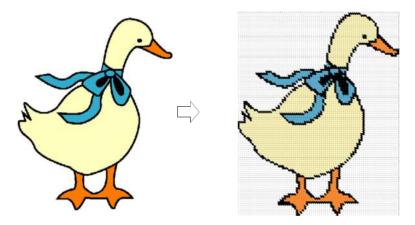


This section describes techniques for manual cross stitch digitizing. It also covers automatic techniques and cross stitch lettering.

Cross stitch colors & types

BERNINA Cross Stitch provides the full range of cross stitch types which you can use to create outlines and fills of any color. You can also control the orientation of fractional cross stitches to create different patterning effects.

Select stitch colors

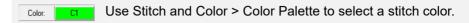

You can select stitch colors from the **Color Palette** before digitizing, or apply a new color to selected areas.

To select a stitch color...


1 Click or right-click the color palette to open it.



Tip If you want the **Select Thread** dialog to remain open, right-click the color palette.

- 2 Select a color.
 - Select a color from the color palette to apply to newly digitized areas.
 - ▶ Select a stitch block, then select a color to change its color.


Stitches will be digitized in the selected color.

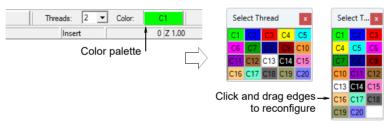



Tip You can drag the **Select Thread** dialog and place it anywhere in the design window. Click and drag the edges to reconfigure as preferred or to display hidden colors.

Select outline stitches

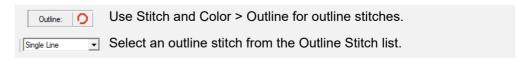

There are two types of outline stitch, **Single Line** and **Current Cross Stitch**. Select a cross stitch type before selecting **Current Cross Stitch**.

To select an outline stitch...

- 1 Click the Outline icon.
- 2 Select a stitch type from the Outline Stitch list.
 New stitches will be digitized as single lines or crosses. If you are using Current Cross Stitch, the currently selected cross stitch type applies.





Note Depending on the stitch type you select, you can set the direction of the stitch.

Related topics

Set cross stitch orientation

Select fill stitches



Fill stitches are all cross stitches. Choose from amongst the following: full cross, three-quarter cross, half cross, quarter cross, mini cross, upright cross, double cross, elongated vertical cross, and elongated horizontal cross.

To select a fill stitch...


- 1 Click the Fill icon.
- **2** Click or right-click the **Fill Stitch** button.




Tip If you want the **Select Stitch** dialog to remain open, right-click **Fill Stitch** button.



The **Select Stitch** dialog opens.

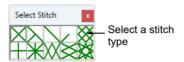

3 Choose a stitch type. Stitches will be digitized in that stitch type. The **Select Stitch** dialog closes.

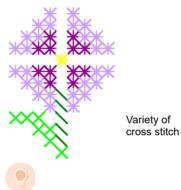


Tip Depending on the stitch type, you can set stitch direction or orientation.

Related topics

- Cross stitch fills
- Set cross stitch orientation


Set cross stitch orientation

You can control the orientation of fractional cross stitches to create different patterning effects. When digitizing individual stitches, you do this directly pixel by pixel. When digitizing a fill, you do so via the **Select Fill Style** dialog. The method is the same.

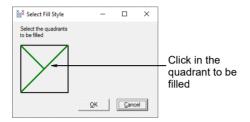


To set cross stitch orientation...


▶ To create three-quarter cross stitches, click the corner where you want the quarter stitch to be.

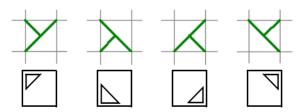


▶ To create half cross stitches, click the corner where you want your stitch to start.

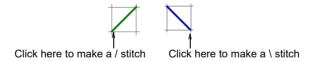


▶ To create quarter cross stitches, click the corner where you want your stitch to start.

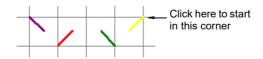

To create mini cross stitches, click the corner where you want your stitch to start.

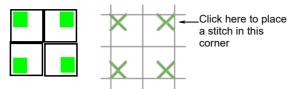

▶ To create elongated cross stitches, click the corner where you want your stitch to start.

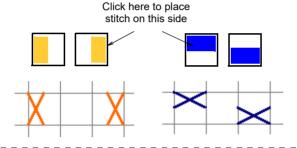

Related topics


Types of cross stitch

Digitizing with cross stitches

BERNINA Cross Stitch provides techniques for digitizing single stitches or lines of stitches, filled and unfilled rectangles or circles, or filled and unfilled 'closed' free-form shapes. You can also create free-form outlines or



borders. The **Area Fill** feature lets you fill closed shapes or 'color blocks' with stitches.

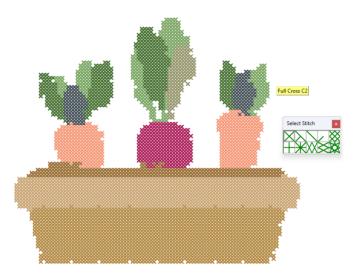

Digitize single stitches or lines



Use Design > Pencil to draw a single stitch or line of stitches.


You can digitize a single stitch or line of stitches. Depending on the stitch type you select, you must also set the stitch direction.

To digitize a single stitch or line...

- 1 Click **Outline** and select an **Outline** stitch type. If you are using **Full Cross**, the currently selected cross stitch type applies.
- **2** Select a color from the color palette.
- 3 Click the **Pencil** icon.
- **4** Click a square to make a single stitch, or click and drag the pencil to make a line.



Note Press **Ctrl** and drag to draw straight vertical lines.

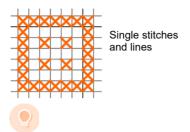

Tip You can also use the **Pencil** tool to create combinations of partial crosses comprised of multiple colors.

Related topics

- Create combination stitches
- Select fill stitches
- Select stitch colors
- Create combination stitches

Digitize circles




Use Design > Circle/Oval to draw and digitize ovals or circles.

The **Circle** tool provides a quick way to digitize filled or unfilled circles.

To digitize a circle...

- 1 Click the Circle icon.
- 2 Select a color from the Color palette.
- 3 Select an Outline or Fill stitch type.
- **4** Mark the center point then mark a point on the circumference.
 - ▶ If you want a perfect circle, press Enter.
 - ▶ If you want an ellipse, mark a third reference point and press Enter.

The circle or oval is filled or outlined depending on the stitch type selected.

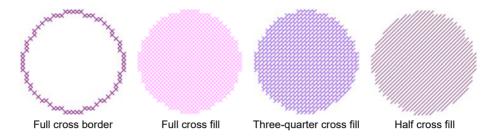

Related topics

- Select stitch colors
- Cross stitch colors & types

Digitize rectangles



Use Design > Rectangle to draw and digitize rectangles or squares.

The **Rectangle** tool provides a quick way to digitize filled or unfilled rectangles or squares.

To digitize a rectangle...

- 1 Click the **Rectangle** icon.
- **2** Select a color from the **Color** palette.
- 3 Select an Outline or Fill stitch type.
- 4 Mark rectangle origin, then rectangle corner.
 Press Ctrl and mark corners to digitize a square. The square or rectangle is filled or outlined depending on the stitch type selected.



Note Depending on the stitch type you select, you can set the direction of the stitch.



Related topics

- Select stitch colors
- Cross stitch colors & types
- Create combination stitches

Digitize open & closed shapes



Use Design > Closed Curve to draw and digitize closed shapes.



Use Design > Open Curve to draw and digitize open shapes.


You can create freeform outlines or borders using the **Open Curve** icon. You can create freeform filled shapes using the **Closed Curve** icon. Select an outline stitch for unfilled shapes and a fill stitch for filled shapes.

To digitize an open or closed shape...

- 1 Click Open Curve or Closed Curve.
- **2** Select a color from the **Color** palette.
- 3 Select an Outline or Fill stitch type.
- **4** Mark reference points on your design. Left-click for sharp corners and right-click for round corners.



5 Press **Enter**. The shape is filled or outlined depending on the stitch type selected.

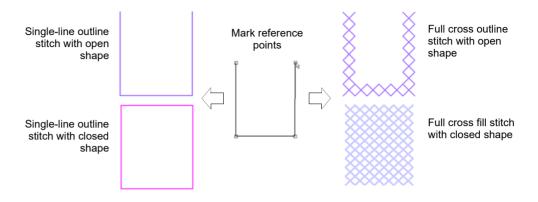

Related topics

- Select stitch colors
- Cross stitch colors & types

Digitizing images automatically

Using Flood Fill, you can create cross stitch fills from image color blocks. Alternatively, using Magic Wand, you can create cross stitch fills from colored sections of a picture. Alternatively, digitize the entire backdrop image automatically using Auto Stitch.



Area-fill color blocks



Use Design > Area Fill to fill a closed shape or color block with stitches.

Fill closed areas with stitches using **Area Fill**. You can also use the tool to change the color and stitch type of **Full Cross** outlines.



Note The **Area Fill** tool only works on the cross stitch layer. It will not work with bitmap images used as backdrops.

To area-fill a color block...

- 1 Select a color from the Color palette.
- **2** Select a **Fill** stitch type.
- 3 Click the Area Fill icon.
- **4** Click within a closed area. The shape is filled in the selected stitch type and color.



Caution Area Fill will not work within single outline shapes and some shapes with angled sides may not fill correctly. Try creating two rows of cross stitches around the outline.

Related topics

- Select stitch colors
- Select fill stitches

Digitize with Magic Wand




Use Design > Magic Wand to create cross stitches from a colored area of a picture.

Using Magic Wand, you can create cross stitch fills from colored sections of a picture. Magic Wand works with both fill stitches and outlines.


To digitize with Magic Wand...

- **1** Prepare your image as necessary. Use a third party paint program to clean up the image.
- 2 In Picture mode, load a picture.

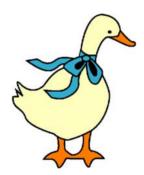

- 3 In Design mode, click Magic Wand.
- 4 Select a cross stitch type.
- **5** Select a color from the palette.

6 Click a colored block in your picture. All areas of that color are digitized in the selected color.

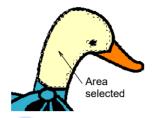





Note The **Magic Wand** selects and digitizes all blocks of that color from your picture. You can change the stitch type and color later if you want.

Related topics

- Insert bitmap images
- Digitize with Magic Wand

Digitize with Auto Stitch



Use Design > Auto Stitch to automatically create cross stitch designs from pictures.


Digitize the entire backdrop image automatically using **Auto Stitch**. You can change the stitch type manually later as required.

To digitize with Auto Stitch...


1 Prepare your image as necessary. Use a third party paint program to clean up the image.



2 In Picture mode, load a picture.

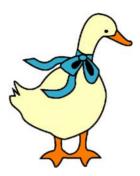


3 In Design mode, click the Auto Stitch icon and click the image. The Auto Stitch dialog opens.

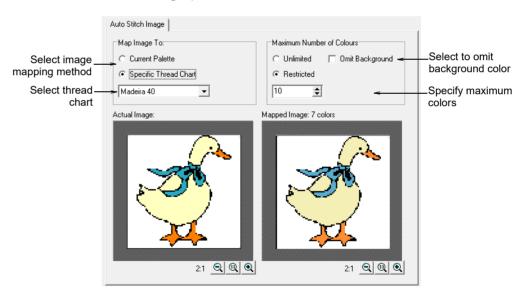

- **4** Select to map the picture colors to:
 - Current Palette: Only colors in the current palette are used.

▶ Specific Thread Chart: Only colors in a selected thread chart are used.

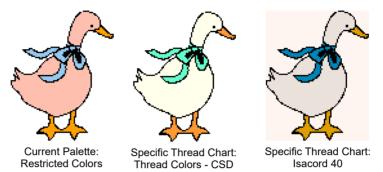


5 Specify the maximum number of colors to be used:


Unlimited	Thread colors will be allocated according to the number of colors in the palette selected in the first dialog.
Restricted	Enter the number of colors you want to use.
Omit background	Select to omit the background color.


The results display in the preview pane.



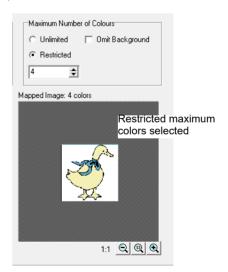

6 Click **OK**. The picture is digitized. You may need to touch up some areas manually.

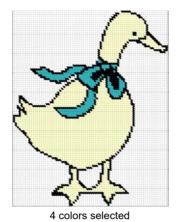

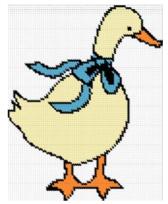

Unlimited maximum colors selected



Note Auto Stitch is disabled if no picture is loaded.

Related topics

- Digitize with Magic Wand
- ▶ Insert bitmap images

Digitizing cross stitch letters



Use Design > Lettering to add letters to your design. Right-click Lettering to open the Font dialog.


As with BERNINA Embroidery Software, BERNINA Cross Stitch lets you add lettering to a design by typing it directly in the design window. In BERNINA Cross Stitch use the **Font** dialog to select font, size and style. Select either outline or fill to digitize letters. Once typed, you cannot edit letters. Each letter is treated as a stitch block.



Tip Lettering in BERNINA Cross Stitch may appear thicker than the original TrueType font. This is generally due to 'ClearType' font smoothing which is turned on by default in Windows Vista or later. Temporarily turning off ClearType produces better lettering in BERNINA Cross Stitch although this may affect its appearance in other applications.

To digitize cross stitch letters...

1 Right-click the **Lettering** icon. The **Font** dialog opens.

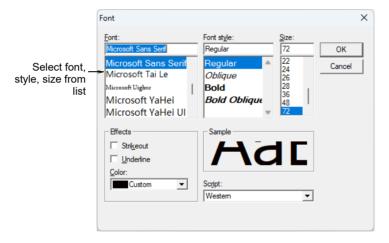

- 2 Select a font, style and size from the lists.
- 3 Click OK.
- **4** Click the start point in the design window.
- **5** Type the letters and press **Enter**.





Tip Use **Creative Cross** to add lettering objects to your cross stitch design. See Reference Manual for details.



Tip To edit letters, use **Auto Select** with the **Ctrl** key to select. Then change the stitch type or color as required.

Related topics

Select cross stitches automatically

CHAPTER 4 CROSS STITCH EDITING

BERNINA Cross Stitch provides techniques for editing cross stitch designs, including moving, rotating, and mirroring stitch blocks. You can erase stitches as well as change colors and stitch types of selected areas. You can clone a selection for re-use as a 'rubber stamp' and fill large areas with motifs or special composite stitches. You can also edit stitches to create combinations of partial crosses comprised of multiple colors.



This section provides details of cross stitch editing features including selecting and

locking stitches as well as simple stitch editing. It also covers transforming stitch blocks. It also deals with special editing techniques as well as adjusting thread colors.

Selecting & locking stitches

In order to edit an area of a design, you must first select it. BERNINA Cross Stitch provides a number of ways to select cross stitches. It also lets you lock cross stitches and/or outlines so that they are not moved or edited by accident.

Select cross stitches manually



Use Design > Select Object to select a single stitch or block of stitches.



Use Design > Polygon Select to select irregular areas or shapes.


The **Select Object** and **Polygon Select** tools work in a similar way to BERNINA Embroidery Software. The difference is that in BERNINA Cross Stitch you work with stitch blocks or areas rather than design objects.



Caution You cannot select cross stitches outside the hoop.

To select cross stitches manually...

- ▶ With the **Select Object** tool selected, simply drag a bounding box around the area to be selected.
- ▶ With the **Polygon Select** tool selected, mark reference points around the area you want to select and press **Enter**.

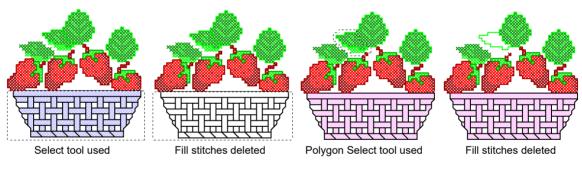




Tip Hold down **Ctrl** to select multiple areas.

Select cross stitches automatically



Use Design > Auto Select to select a single color block or an undigitized area.

Auto Select is specific to BERNINA Cross Stitch. It allows you to select a single color block or a closed undigitized area. Only adjoining stitches of the same color are selected.

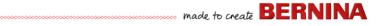


To select cross stitches automatically...

- 1 Click the Auto Select icon.
- **2** Click a block of stitches. Only adjoining stitches of that color are selected.



Tip Hold down Ctrl to select multiple blocks.

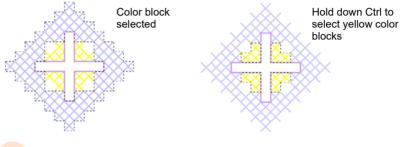



Tip You can change the color of the selection completely by selecting a color from the palette.

Lock stitches


You can lock cross stitches and/or outlines so that they are not moved by accident.

To lock stitches...

1 Select Edit > Crosses or Edit > Outlines.

When **Crosses** is ticked in the menu, cross stitches can be moved. Likewise, when **Outlines** is ticked, outlines can be moved.

2 Select an area and click and drag to move stitches.

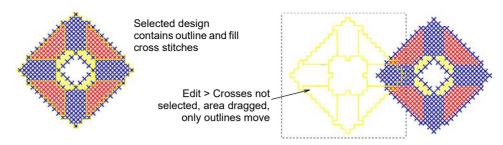

3 Select Crosses or Outlines again to uncheck it and lock all crosses or outlines.

Simple stitch editing

BERNINA Cross Stitch lets you change the color or stitch type of selected stitch blocks at any time. You can also remove stitches at any time.



Tip BERNINA Cross Stitch lets you change the thread colors of an existing design. You can also mix your own colors to more closely match the required design colors. See Select stitch colors for details.

Copy, cut, paste stitch blocks



Use General > Copy to copy selected stitch blocks to the clipboard.



Use General > Cut to cut selected stitch blocks to the clipboard.




Use General > Paste to paste copied stitch blocks from the clipboard.

You change copy, cut and paste selected stitch blocks at any time. The difference is that in BERNINA Cross Stitch you work with stitch blocks or areas rather than design objects.

To copy, cut and paste stitch blocks...

- 1 Select the stitch block to copy or cut.
- **2** Click the **Copy** or **Cut** icon. The selected area or areas are copied to the clipboard.
- **3** Click the **Paste** icon. The duplicate area is pasted over top of the selected area.
- 4 Click and drag to move the pasted stitch block.

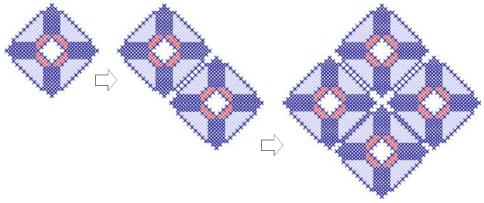



Tip Duplicate and rotate blocks of stitches to make patterns.

Related topics

- ▶ Rubber stamp fills
- Selecting & locking stitches
- Transforming stitch blocks

Change stitch block settings



Use Design > Auto Select to change the color or stitch type of selected stitch blocks.

You can change the color and/or stitch type of selected stitch blocks at any time.


To change stitch block settings...

1 Use Auto Select to select the color block/s.




Tip Hold down Ctrl to select multiple blocks.

2 Select a new color from the palette. The selected color fills the selection area. The area remains selected.

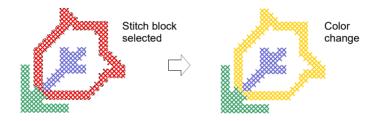

3 Select a new stitch type from the **Stitch** toolbar. The selected stitch type fills the selection area.

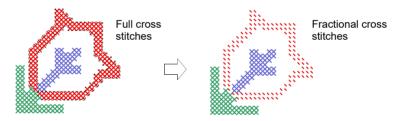

Related topics

Select cross stitches automatically

Erase fills & single lines



Use Design > Eraser to erase fills and single lines.


Use the **Eraser** tool to remove stitches. The eraser will remove either fill stitches or single line borders depending on the stitch type selected. Cross-stitched borders are treated as fill stitches.



Caution You cannot select and erase stitches outside the hoop.

To erase a fill or single line...

- 1 Click the Eraser icon.
- 2 Select Fill on the Stitch/Color bar.
- **3** Click and drag the cursor across the stitches to be removed. Only fill stitches are removed. Any single line borders remain.

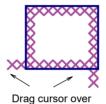

stitches to erase




Only fill stitches erased, single line borders remain



Tip You can also erase cross stitches by selecting them and pressing the **Delete** key.

- 4 Select Outline on the Stitch/Color bar.
- **5** Click anywhere on a single line. The line is removed. Any cross stitches are not erased.

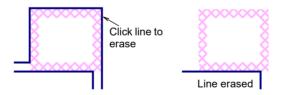



Note A single line border is removed in one click.

Transforming stitch blocks


BERNINA Cross Stitch lets you perform various transformations on selected blocks of cross stitches. You can move them, rotate them in a clockwise or counter-clockwise direction. You can also mirror blocks of cross stitches either horizontally or vertically.

Move cross stitch blocks

You can move blocks of cross stitches at any time.

To move a block of cross stitches...

- 1 Select the stitch block to move.
- 2 Click and drag them to a new location.

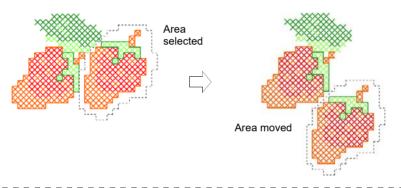

Related topics

Selecting & locking stitches

Rotate cross stitch blocks




Use Design > Rotate 90°CW/CCW to rotate selected stitches. Click to rotate clockwise. Right-click to rotate counter-clockwise.

You can rotate blocks of cross stitches in a clockwise or counter-clockwise direction. Duplicate and rotate blocks of stitches to make patterns.

To rotate a block of cross stitches...

- 1 Select the stitch block to rotate.
- 2 Click the Rotate 90° CW/CCW icon.

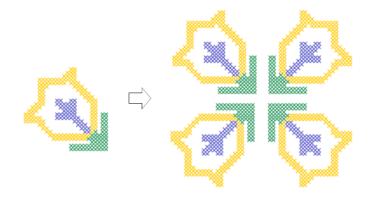

Related topics

Selecting & locking stitches

Mirror cross stitch blocks



Click Design > Mirror Horizontal to mirror selected stitches horizontally.



Click Design > Mirror Vertical to mirror selected stitches vertically.

You can mirror blocks of cross stitches either horizontally or vertically.

To mirror a block of cross stitches...

1 Select the stitch block to mirror.

2 Click the Mirror Horizontal icon.





Tip To mirror the complete design, select Arrange > Mirror Horizontal/Mirror Vertical.

Related topics

Selecting & locking stitches

Special editing techniques

BERNINA Cross Stitch provides a number of editing techniques which are especially helpful for cross stitch digitizing. You can clone a selection for re-use as a 'rubber stamp' and fill large areas with motifs or special composite stitches. You can combine fractional cross stitches in a variety of ways. You can also add a cross stitch border or a single line border, or both, to areas of a design.

Rubber stamp fills




Use Design > Rubber Stamp to clone stitches.


Clone a selection for re-use as a 'rubber stamp' and fill large areas with motifs or special composite stitches.

To rubber stamp fills...

1 Click the **Select Object** icon and select the area to be cloned.

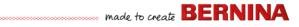

- **2** Click the **Rubber Stamp** icon. The selected area is copied and attached to the pointer.
- **3** Click to place the stamp as many times as you want.

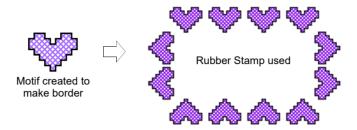

4 Press **Esc** or select another icon to turn off **Rubber Stamp**.

Create combination stitches



Use Design > Pencil to add combination stitches.


Fractional cross stitches $-\frac{1}{4}$, $\frac{1}{2}$, or $\frac{3}{4}$ – can be combined to make crosses comprised of multiple colors. You can also combine mini crosses, elongated vertical or horizontal crosses and outline stitches.

To create combination stitches...

- 1 Select a stitch type.
 - Select 3/4 for three quarter crosses.
 - Select 1/2 for half crosses.
 - Select 1/4 for quarter crosses.
 - Select Mini Cross for mini crosses.
 - Select Elongated Vertical Cross for vertical crosses.
 - Select Elongated Horizontal Cross for horizontal crosses.




- **2** Select a color from the color palette.
- 3 Click the Pencil icon.
- **4** Click where you want the stitch to be inserted.

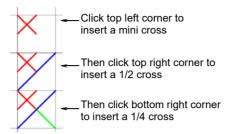



Note If you do not have **Insert** selected, the whole stitch will be replaced.

5 Repeat as many times as needed.

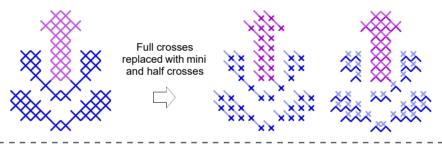

Related topics

- Cross stitch variations
- Select fill stitches
- Select stitch colors


Add borders to selected areas

Add a cross stitch border or a single line border, or both, to selected areas of a design.



To add borders to a selected area...

- 1 Select the **Outline** icon.
- **2** Click the **Area Fill** icon and click inside an area. A line of outline stitches is added around the edges of the selection.
- **3** Optionally, click again to add another line of stitches inside the first line.

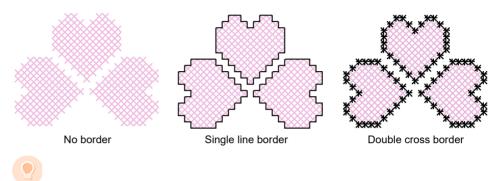

Tip To combine a cross stitch with a line border, select **Full Cross** stitch type and **Area Fill**, then select **Single Line** and **Area Fill** again.

Changing stitch colors

BERNINA Cross Stitch allows you to set up an unlimited number of color slots. New objects are digitized using the currently selected color. You can change color before or after digitizing. BERNINA Embroidery Software also lets you manage the thread colors in your palette. Select from a range of commercial thread charts. Adjust the exact number of colors in the palette as required. Add extra slots as required.

Search & assign threads

You can search for a thread by code or description and assign it to a selected design color slot. The supplied charts represent the brands of threads that BERNINA Cross Stitch supports. Each chart has a range of colors associated with it. The code, brand and description of each color is displayed so that you can easily find them in a craft or sewing shop. You can select colors by shade or by number. Select the thread chart for the


brand of thread you have at home or just select a chart which has colors you like.



Caution The representations of commercial thread charts are approximate, and the computer simulations are not intended to exactly match the identified thread color.

To search and assign a thread...

1 Select **Settings** > **Thread Colors**. The **Thread Colors** dialog opens.

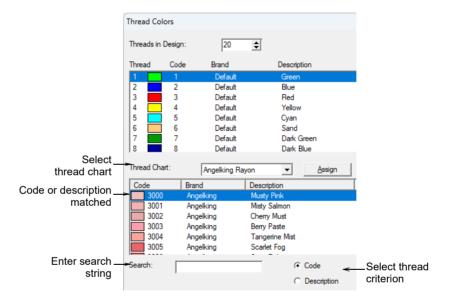

- 2 Select a thread chart from the **Thread Chart** list.
- 3 Select the thread criterion to search on Code or Description.Code is the identification number of a thread color in a brand.
- **4** In the **Search** field, enter the first few characters of the required code or description.
 - The system searches for the closest match and displays them in the thread color list.
- **5** Select a color slot in the **Threads in Design** panel and click **Assign**.



6 Click OK to close.



Note Selected color settings only apply to the current design and are part of the 'design properties'. As such they are saved with the design.

Mix thread colors

You can change the color that displays for a particular thread, or create new thread colors using the **Color** dialog.

To mix your own thread colors...

1 Click Edit in the Thread Colors dialog. The Edit Thread dialog opens.



2 Click Mix. The Color dialog opens.






- **3** Click **Define Custom Colors** to open the color spectrum.
- **4** From the **Basic colors** table, select a color that closely matches the color you require.
- **5** Click and drag the cross hairs on the color spectrum to get the exact color you require.
- **6** Drag the slider on the right of the color spectrum to adjust color brightness.
 - The HLS and RGB values appear in the bottom right-hand corner of the **Color** dialog. Enter these values directly to define exact colors.
- 7 When you have mixed the required color, click **Add to Custom Colors**.
- **8** Click **OK**. The new color appears in the **Color** preview box.


APPENDIX A

CROSS STITCH QUICK REFERENCE

This Quick Reference details all menu options and toolbars available in BERNINA Cross Stitch.

BERNINA Cross Stitch design window

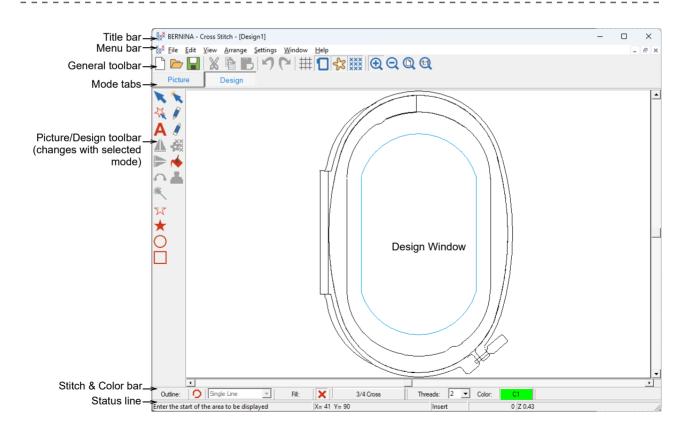

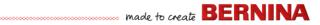

BERNINA Cross Stitch menu bar

The BERNINA Cross Stitch window menu bar contains the pulldown menus described below. Some are also available as toolbar buttons.



Note: Standard Windows **Alt** key shortcuts apply. Use the **Alt** key with the letter underlined in the menu. To cancel an operation, press **Esc** twice.

File menu

New Open new empty design. Open Open design. Close Close current design window. Save Save current design. Save as Save current design to with a different name, location or format. Design Add comments about design for printing on worksheet. properties Exit Close all open designs and exit BERNINA® Embroidery Software BERNINA Cross Stitch program.

Edit menu

Undo Cancel last command.
 Redo Re-apply cancelled commands.
 Cut Delete selection and places it on clipboard.
 Copy Copy selection to clipboard.
 Paste Paste contents of clipboard to design window.

Duplicate Duplicate selection and place it on

current selection.

Delete Delete selection without placing it on

clipboard.

Select All Select all objects in design.

Deselect Deselect a

Deselect all selected objects in design.

ΑII

Insert a fractional cross stitch in the

same square as other fractional stitches as long as they are not on top of each

other.

Outlines Lock or unlock outline stitches for

editing.

Crosses Lock or unlock cross stitches for editing.

View menu

By color Show only selected colors in design.

Show 1:1 Show design at correct size.

Show all Show whole design.

Zoom box Zoom selected area to full window size.

Redraw design.

Grid Show or hide grid and sets grid size and

spacing.

Crosses Show stitches as colored tiles or cross

stitches.

Picture Show or hide background picture.

Hoop Show or hide hoop and sets hoop size

and position.

Measure Measure design size.



Arrange menu

Center design to the center of the hoop.

Mirror Mirror selected object/s horizontally about center.

Mirror Mirror selected object/s vertically about center.

Settings menu

Thread Assign thread colors for use in design. colors Fabric Set number of stitches per inch or mm. count Select background fabrics and colors. Fabric display **Options** Adjust settings for display window. Calibrate screen Display setup Scanner Set scanner options. setup

Window menu

Cascade Display any open windows in a 'cascaded' or stair-stepped fashion.

Tile Display any open windows in a horizontally 'tiled' (non-overlapping) fashion.

Tile Display any open windows in a

vertically vertically 'tiled' (non-overlapping) fashion.

1 (title of Choose from a list of open windows open titles in the order in which they are window) stacked.

Help menu

Help topics List online help topics.

Reference Open User Guide in Adobe Acrobat

manual PDF format.

BERNINA Cross Stitch window toolbars

The BERNINA Cross Stitch window contains the toolbars described below.

Mode tabs

There are two **Mode** tabs in the BERNINA Cross. Stitch window. Different modes display different toolbars

1	
Picture	

Load, edit and save picture as a background for embroidery design. Embroidery shapes are not shown.



Create and modify embroidery designs. Show embroidery shapes as well as pictures.

General toolbar

Save

Copy

Undo

Redo

Grid

Hoop

Picture

ſ	_	D	ì	
l				

New Same as File > New



Same as File > Open Open



Same as File > Save



Cut Same as Edit > Cut



Same as Edit > Copy



Same as Edit > Paste Paste



Same as Edit > Undo



Same as Edit > Redo



Same as View > Grid



Same as View > Hoop



Same as View > Picture



Crosses Same as View > Crosses



Zoom box Same as View > Zoom Box



Zoom out 2X

Same as View > 700m Out 2X



Show all

Same as View > Show All



Show 1:1

Same as View > Show 1:1

Picture toolbar

Select picture

Select pictures in design window.

Load picture

Insert picture in design window.

Scan picture Scans picture into BERNINA®

Embroidery Software.

Dim or brighten picture to show Dim picture stitches more clearly in design

mode

Save picture

Save picture after editing.

Design toolbar

Select object

Select a single stitch or block of stitches.



Polygon select

Select irregular areas or shapes.



Lettering

Create lettering and change lettering properties.



Mirror horizontal Same as Arrange > Mirror

Horizontal



	Mirror vertical	Same as Arrange > Mirror Vertical
~	Rotate 90° CCW / CW	Rotate selected objects in 90° increments. Click to rotate counter clockwise. Right-click to rotate clockwise.
*	Magic Wand	Digitize single shape in design.
W	Open curve	Draw and digitize open shapes
*	Closed curve	Draw and digitize closed shapes.
0	Circle / Oval	Draw and digitize ovals or circles.
	Rectangle	Draw and digitize rectangles or squares.
*	Auto select	Select a single color block or an undigitized area.
	Pencil	Draw single stitch or line of stitches.
	Eraser	Erase cross stitches.
XX XX	Auto stitch	Digitize picture automatically. (This process is different to BERNINA® Embroidery Software as it converts pixels to cross stitches.)
*	Area fill	Fill closed shape with stitches.
-	Rubber	Clone selection for re-use as

'rubber stamp'.

stamp

INDEX

Α	digitizing areas 43	selecting stitches with Auto
	digitizing circles 38	Select 51
Area Fill tool 42	digitizing closed shapes 40	setting orientation 35
ARX file types 29	digitizing lines 37	setting stitch density 14
Auto Select tool 51, 54	digitizing open shapes 40	showing stitches 25
Auto Stitch Image dialog 44	digitizing pictures	three-quarter 2
Auto Stitch tool 44	automatically 41, 44	types 1
	digitizing rectangles 39	upright cross 4
D	double cross 5	using with artista 29
В	editing stitches 50	variations 7
http://www.to.com	elongated cross 5	Crosses tool 25
bitmap images	Eraser tool 55	Cut tool 53
reshaping 24	erasing stitches 55	
scaling 24	fill stitch 33	D
	fills 2	D
C	French knot 6	Design mode tab 16
	full cross 2	Design Properties dialog
Circle tool	grid settings 16	Thread Colors 63
cross stitch 38	half cross 3	Design toolbar
Closed Curve tool 40	hoop settings 18	Area Fill 42
Color dialog 17, 64	letters 47	Auto Select 51, 54
Copy tool 53	locking stitches 50	Auto Select 31,34 Auto Stitch 44
cross stitch	Magic Wand 43	Circle 38
adding borders 61	mini-cross 4	Closed Curve 40
area filling 42	mirroring stitches 58	Eraser 55
Auto Select tool 51	moving stitches 57	Lettering 47
Auto Stitch 41, 44	outlines 32	Magic Wand 43
automatic digitizing 41, 44	pencil tool 37	Mirror Horizontal 58
borders 6	picture mode 16	Mirror Vertical 58
changing background colors and	quarter cross 4	Open Curve 40
fabrics 19	rotating stitches 57	Pencil 60
changing stitch color 54	rubber stamp 59	Pencil tool 37
combination stitches 9,60	Rubber Stamp tool 59	Polygon Select 51
copy, cut, paste 53	saving designs 28	Rectangle 39
design files 28	selecting cross stitch types 31,62	Rotate 90 deg CW/CCW 57
design information 28	selecting stitch color 32	Rubber Stamp 59
design mode 16	selecting stitches 50	Select Object 50
		Select Object SO

dialogs Auto Stitch Image 44 Color 17, 64 Design Properties > Thread Colors 63 Fabric Count 13 Font 48 Open 20, 22, 29 Options 17, 20	H Half cross stitch 3 Half stitch 60 Hoop tool 18 hoops, automatic centering 18	picture mode tab 16 Picture tool 23 Picture toolbar Load Picture 22 Scan Picture 22 Polygon Select tool 51
Select Fill Style 35 Double cross stitch 5	images reshaping 24 scaling 24	Quarter cross stitch 4 Quarter stitch 60
E	inserting bitmaps images 22	R
Elongated cross stitch 5 Elongated Horizontal Cross stitch 60 Elongated Vertical Cross stitch 60 Eraser tool 55	L Lettering tool 47 Load Picture tool 22	Rectangle tool 39 reshaping, bitmap images 24 Rotate 90 deg CW/CCW tool 57 Rubber Stamp tool 59
F	M	S
Fabric Count dialog 13 Fill tool 33 fills, cross stitch 2 find threads 62 Font dialog 48 French knot cross stitch 6 Full cross stitch 2	Magic Wand tool 43 Mini Cross stitch 60 Mini cross stitch 4 Mirror Horizontal tool 58 Vertical tool 58 mixing your own thread colors 64	Save tool 28 scaling bitmap images 24 Scan Picture tool 22 searching, for threads 62 Select Fill Style dialog 35 Select Object tool 50 Setting cross stitch orientation 35 Stitch and Color bar
G	0	Fill 33 Outline 32
General toolbar Copy 53 Crosses 25 Cut 53 Grid 16 Hoop 18 Paste 53 Picture 23 Save 28 Grid tool 16	Open Curve tool 40 Open dialog 20, 22, 29 Options dialog 17, 20 Outline tool 32 P Paste tool 53 Pencil tool 37, 60	Stitch toolbar 1/2 stitch 60 1/4 stitch 60 3/4 stitch 60 Elongated Horizontal Cross stitch 60 Elongated Vertical Cross stitch 60 Mini Cross stitch 60

Index



Т

tab
design mode 16
picture mode 16
thread colors
mixing your own 64
threads
finding 62
searching for 62
Three-quarter cross stitch 2
Three-quarter stitch 60
tools
on Stitch and Color bar 69

U

Upright cross stitch 4

Index 73